



### VISUALIZE EXACTLY HOW LABELS WILL APPEAR

Robotiq Palletizing configurator allows you to visualize exactly how labels will appear on each pallet load, ensuring consistency, compliance, and feasibility.

**1** In the box node, select 'Set Label Orientation', rotate the orientation to match your current layout and click

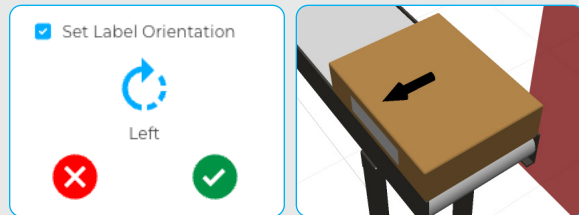




**2** In the pattern node, create from scratch or copy an existing pattern.

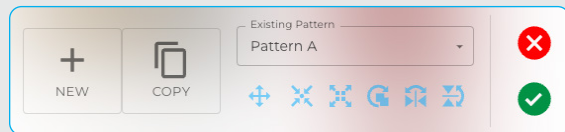

**3** Select individual or multiple boxes and arrange accordingly.



**Tip:** You can select multiple boxes by holding 'Shift/Command' and clicking on desired boxes.

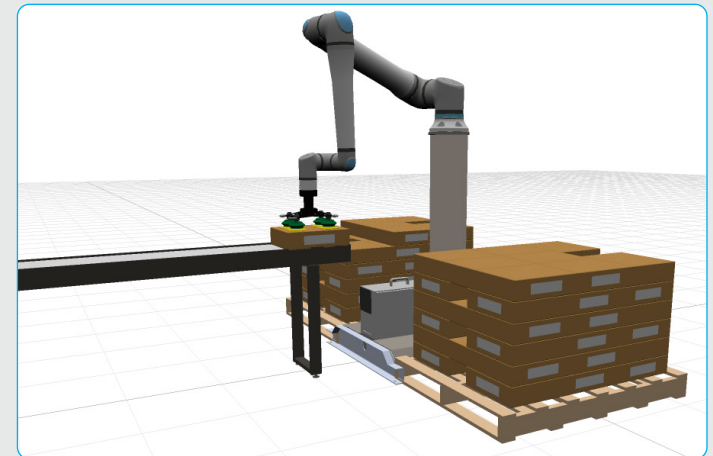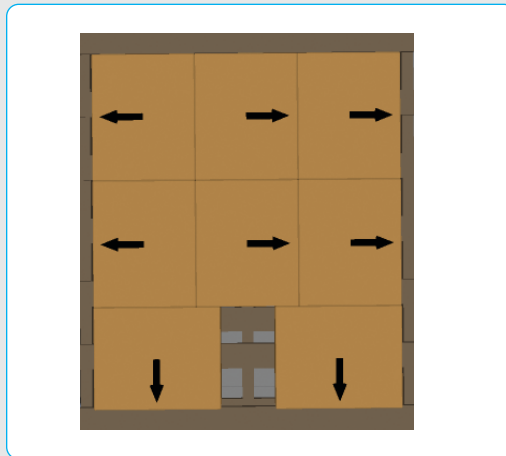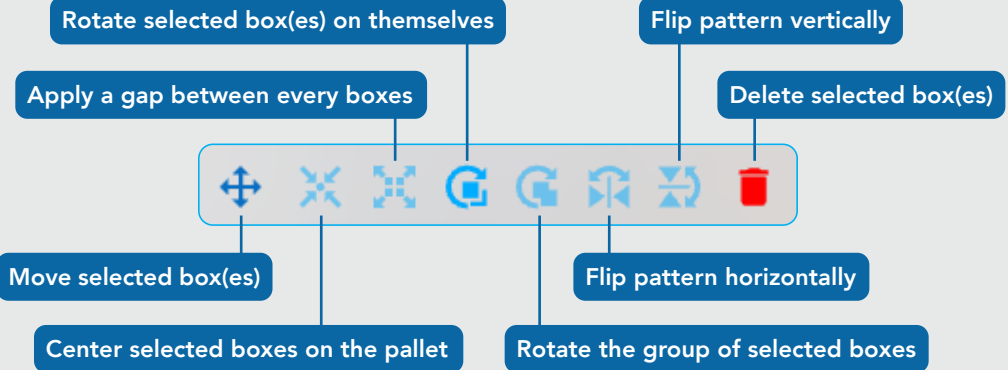

### CONFIGURATOR 101

**Rotate camera angle**  
Click & hold left button (or click and hold one finger on touchpad)

**Move palletizer in space**  
Click & hold right button (or click and hold two fingers on touchpad)

**Zoom in or out**  
Scroll to zoom (stretch out or pinch with two fingers on touchpad)

The camera view will reset to the default position anytime one of the process steps (box, pallet, conveyor and/or pattern) has been opened and closed.